


RA10FT ASSEMBLY INSTRUCTIONS

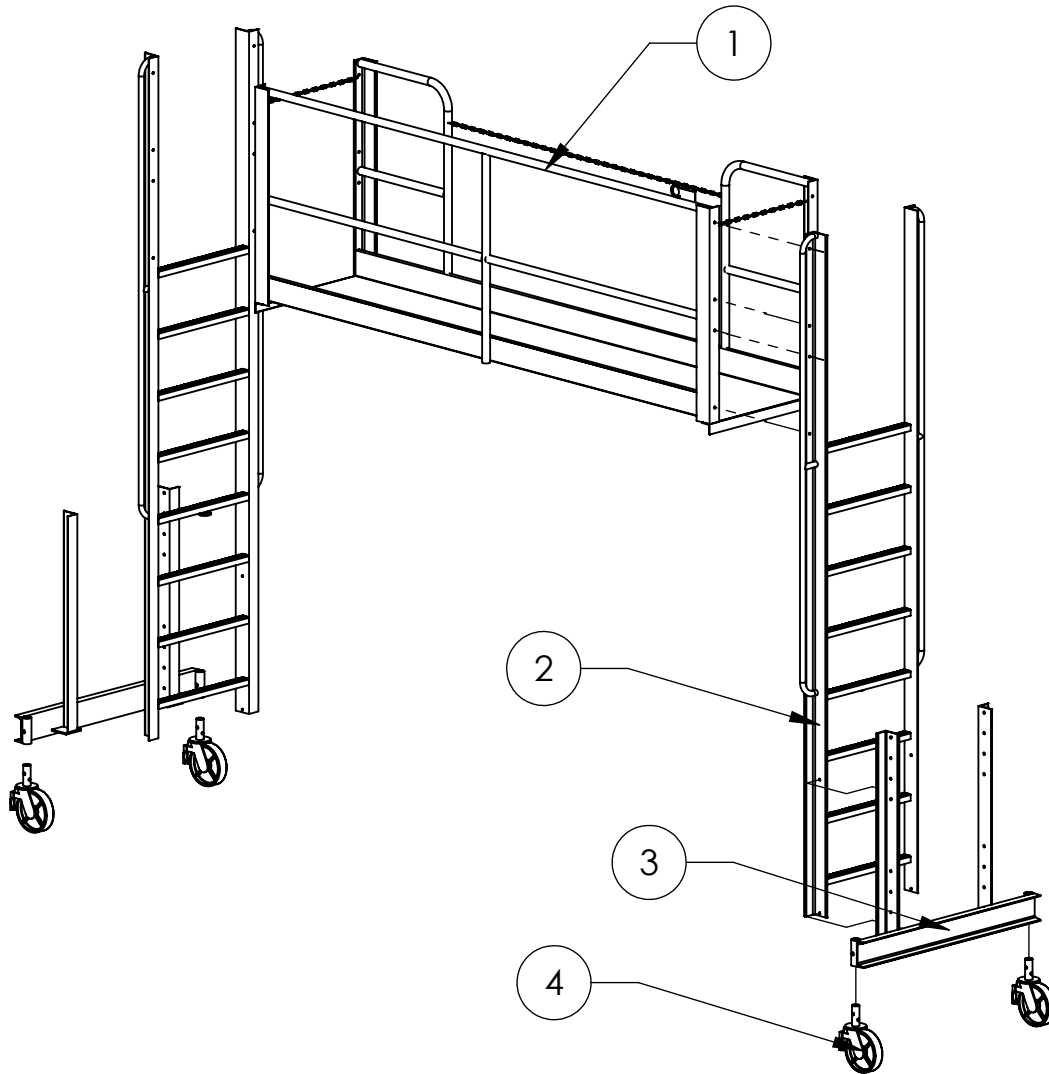

Tools Required:

- (2) 9/16" Wrench/Socket
- (2) 3/4" Wrench/Socket
- Clamp
- 8' Step Ladder
- Fork Lift

Assembly Instructions

Insert (3) plastic caps into bottom of vertical guardrail posts

Center platform onto fork lift and clamp in place

Elevate platform. Bolt ladders onto platform using (8) 3/8" x 1 1/4" bolts (16) flat washers and (8) nylon nuts on each ladder

Bolt adjustable leg assemblies onto ladders using (4) 3/8" x 1 1/4" bolts (8) flat washers and (4) nylon nuts on each leg. Set to desired height.

Bolt casters onto adjustable legs using (1) 1/2" x 3" bolts and a nylon nut for each caster.

Ensure all bolts are tight.

ITEM NO.	PART NUMBER	DESCRIPTION	Default/ QTY.	Weight	FINISH
1	Platform Assembly	Grip Span W/Rails & Chains	1	113	Safety Yellow
2	Ladder Assembly	Non-Slip 8 Rung Ladder	2	147	Safety Yellow
3	Adjustable Leg Assembly	Height Adjustmet Leg	2	64	Orange
4	Caster	8" x 2" Scaffold Caster	4	7	Unpainted