



# TAVSFRLK INSTALLATION INSTRUCTIONS

ITEM NO.	DESCRIPTION	QUANTITY
1	BOLT-ON SUPPORT	2
2	3/8" X 1.25" BOLT	4
3	3/8" WASHER	12
4	3/8" X 3" BOLT	2
5	3/8" NYLOCK NUT	6
6	ADJUSTABLE FOOT	2

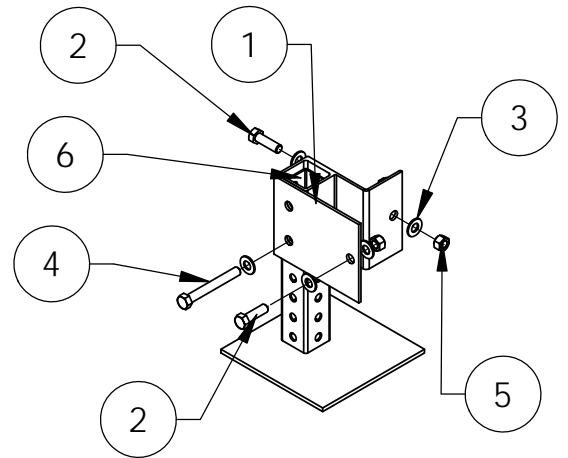


1) ALIGN THE BOLT-ON SUPPORT RECEIVER TUBE WITH THE STAIRWAYS EXISTING HANDRAIL RECEIVER TUBE AND CLAMP THE BOLT-ON SUPPORT IN PLACE. IF A CLAMP IS NOT AVAILABLE, USE THE BOLT-ON SUPPORT AS A TEMPLATE TO MARK THE STAIRWAY FOR DRILLING.

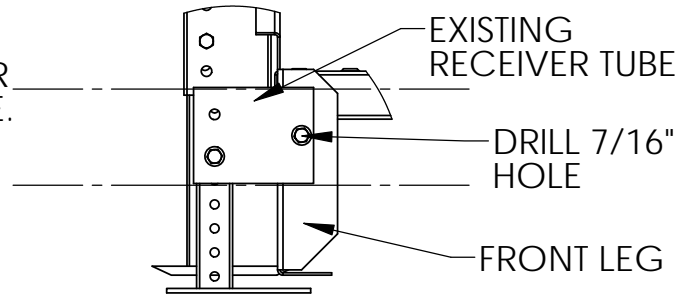

FRONT VIEW OF STAIRWAY

2) IN THE FRONT LEG OF THE STAIRWAY, DRILL A 7/16" HOLE AS SHOWN. (SEE FRONT VIEW OF STAIRWAY)

3) MOVING TO THE SIDE PROFILE OF THE STAIRWAY, WITH THE BOLT-ON SUPPORT ALIGNED, DRILL YOUR SECOND 7/16" HOLE TO MOUNT THE BOLT-ON SUPPORT. (SEE LEFT SIDE VIEW)

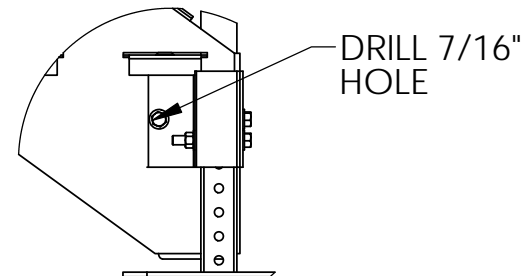

LEFT SIDE VIEW

4) USING THE 3/8" X 1.25" BOLTS, WASHERS, AND NYLOCK NUTS PROVIDED, FASTEN THE BOLT-ON SUPPORT TO THE STAIRWAY.

5) REPEAT THESE STEPS FOR THE OPPOSITE SIDE.

6) INSTALL THE ADJUSTABLE FOOT IN THE BOLT-ON SUPPORT TO LEVEL THE STAIRWAY TO THE EXISTING GRADE. WHEN THE PROPER MOUNTING HOLE IS LOCATED IN THE BOLT-ON SUPPORT, USE THE 3/8" X 3" BOLTS, WASHERS AND NYLOCK NUTS PROVIDED TO FASTEN THE ADJUSTABLE FOOT IN PLACE.

